




ASSEMBLY INSTRUCTIONS

1 Twist off the lock from the braces.

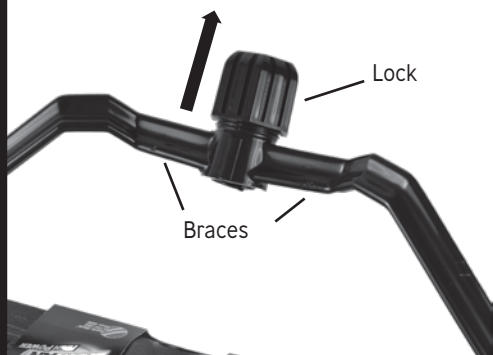

2 Slide the handle in between both braces and into the broom block. Twist handle into broom block.



3 After screwing in the handle, line up both braces together on the handle.



4 Slide the lock down the handle.



5 Screw the lock onto the braces.




6 Remove the packaging. Ready to sweep.





INSTRUCCIONES DE ASAMBLEA

1 Remueve el candado de las abrazaderas.

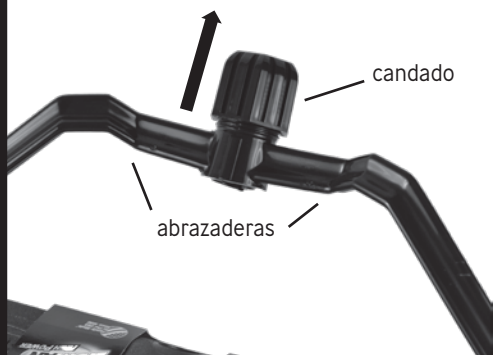

2 Resbala el mango por en medio de las abrazaderas y por dentro del bloque de escoba. Retuerce el mango por dentro del bloque de escoba.



3 Después de que el mango es retorcido, alinea las abrazaderas, juntándolas sobre el mango.



4 Resbala el candado hacia abajo.



5 Retuerce el candado sobre las abrazaderas.



6 Remueve el embalaje. Listo para usar.

